



ESPERTO

Espressobereiter | Espresso maker

Geeignet für alle Herdarten außer Induktionsherde.

Verwenden Sie nur Original-Ersatzteile.

Vor dem Gebrauch

Achten Sie darauf, dass das Sicherheitsventil (2), der Trichterfilter (3), die Dichtung (5) und die Filterplatte (6) an ihrem Platz sind. Sollte etwas nicht richtig fest sein, benutzen Sie den Espressobereiter nicht, sondern wenden Sie sich an Ihre Butlers Filiale.

Benutzen Sie den Espressobereiter nur für den vorgesehenen Zweck und folgen Sie dieser Anleitung.

Vor dem ersten Gebrauch, Espressobereiter mit warmem Wasser waschen. Den ersten Kaffee zubereiten und entsorgen. Bei Gasherden sollte die Flamme nicht größer sein als die Unterseite des Espressobereiters; beim Elektroherd wählen Sie eine Platte mit gleichem Durchmesser wie die Unterseite des Espressobereiters.

Gebrauchsanleitung

1. Füllen Sie den unteren Teil (1) bis zum Ventil (2) mit kaltem Wasser.
2. Stellen Sie den Trichterfilter (3) in den unteren Teil (1) und füllen Sie ihn mit grob gemahltem Kaffee, ohne zu pressen.
3. Schrauben Sie den Oberbehälter (4) fest auf den unteren Teil, ohne den Griff festzuhalten.
4. Stellen Sie den Espressobereiter auf den Herd und warten Sie bis der Kaffee in den oberen Teil (4) fließt.
5. Nehmen Sie den Espressobereiter vom Herd.

Sicherheitshinweise


Außer Reichweite von Kindern benutzen. Achten Sie darauf, beim Gebrauch den Dampfauslass vom Benutzer weg zu drehen und dass der Espressobereiter fest verschlossen ist. Berühren Sie den warmen Espressobereiter nur am Griff und am Knopf. Nach Gebrauch, das Gerät erst öffnen, wenn es vollständig abgekühlt ist. Benutzen Sie den Espressobereiter nie ohne Wasser im unteren Teil.

Pflegehinweise

Espressobereiter nach jedem Gebrauch mit lauwarmem Wasser per Hand waschen. Nicht in der Spülmaschine, mit einem Stahlschwamm oder mit scharfen Reinigungsmitteln reinigen. Den Trichterfilter, die Filterplatte sowie die Dichtung regelmäßig prüfen und falls beschädigt, ein Original-Ersatzteil einsetzen. Das Sicherheitsventil keinesfalls verbiegen oder unsachgemäß verwenden. Überprüfen Sie von Zeit zu Zeit, ob der Griff und der Knopf noch fest am Gerät sitzen.

Entsorgung: Bitte entsorgen Sie das Gerät sachgemäß. Diese Information bitte behalten.

Der Artikel ist ausschließlich nach der bestimmungsgemäßen Verwendung zur Zubereitung von Espresso zu benutzen. Für Schäden, die durch Nichteinhalten entstehen, wird keine Haftung übernommen.

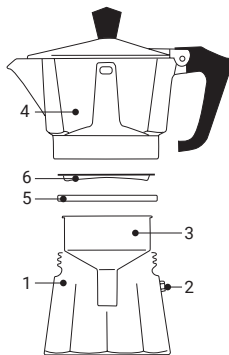

Suitable for all cooking appliances except induction stoves.

Before use

Check the espresso maker's integrity and verify the presence of the safety valve (2), the filter (3), the joint (5) and the filter plate (6). In case of doubts, do not use the espresso maker and contact your Butlers store.

Only use the espresso maker for the purpose it was made for, and follow the instructions below.

Before first use, wash the espresso maker with water. Prepare and dispose of the first coffee. In order to avoid misuse, follow carefully the instructions and consider the following: If you are using a gas cooker, the flame should not be bigger than the espresso maker bottom; if you are using an electric plate, the plate diameter must be the same size or smaller than the espresso maker bottom.

How to use

1. Fill the lower container (1) with cold water without exceeding the hole of the safety valve (2).
2. Put the funnel filter (3) into the lower container (1) and fill with medium ground coffee without pressing the coffee and without leaving any coffee on the container edges.
3. Screw the upper section (4) to the lower container (1) firmly without using the handle.
4. Put the espresso maker on the cooker and wait a few minutes until the coffee has flowed into the upper container (4).
5. Remove the espresso maker from the heat.

Care informations


Keep the espresso maker away from children. The steam should be directed away from the user. Make sure the espresso maker is closed firmly before use. Do not open the espresso maker until it is cold, after removal from the heat. Do not use espresso maker with empty lower container. Use only original spare parts.

Cleaning and maintenance

After each use, handwash the espresso maker with lukewarm water. Do not clean in dishwasher or use steel wool or strong cleaning agents. Periodically, also clean inside the flowing tube in the upper container and check the funnel filter, the filter plate and the joint. If deteriorated, replace them with original spare parts. Do not force nor modify the safety valve. Check the handle and knob are always firm and properly secured.

Environmental information: Dispose product correctly once it has come to its life end. Preserve this information carefully.

The article has to be used exclusively for the intended use for the preparation of espresso. We accept no liability for any damages caused by improper use. Improper use will void any warranty claims.

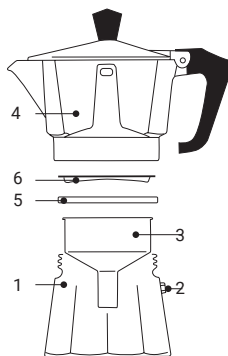

Produced for BUTLERS GmbH & Co. KG
Hohenzollernring 16-18 • D-50672 Köln

butlers.com

N° 50015757; 50015771; 50015788; 10217834;
10217836; 10217837; 10217838; 10218577

